

**WARNING! NEVER LOOK DIRECTLY AT THE LASER POINTER OUTPUT
DO NOT DIRECT THE LASER POINTER AT ANOTHER PERSON'S EYE**



Open battery back cover



Install 2pcs AAA batteries




You may need to adjust the contact nut



Replace the cover and test the laser




The 2 bottom support legs are adjustable

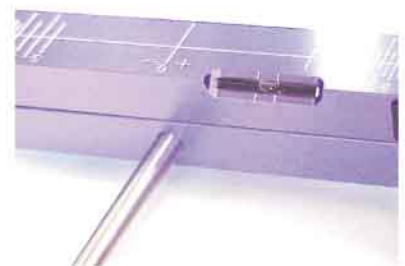

Adjust legs until back bar is leveled



Center your car on the unit

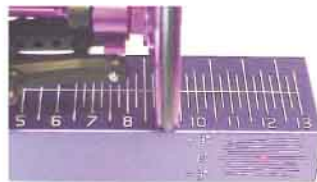

Compress the center part of your chassis and setup your car to read 0 tweak. You can use the laser pointer or the bubble to tweak your car. The bubble can be more precise for 1/12 scale. If you use the laser pointer only, you can work on an uneven surface without a level rear tweak beam. Oval racers can setup their car with 1 or 2 degree tweak.

WARNING! NEVER LOOK DIRECTLY AT THE LASER POINTER OUTPUT